FLEXPOST-XL™ ANCHORING INSTRUCTIONS FOR ASPHALT

Tools Required:
- Rubber Mallet
- Wax Pencil / Marker
- 1/2" Masonry Drill Bit
- 3/4" Ratchet

Parts Included:
- 1 Base Plate
- 4 Mungo Plugs
- 4 Hex Lag Screws
- 4 Flat Washers
- (1) 3/16" Allen Key

WARNING: MUST ANCHOR UNIT ON THE SAME LEVEL AS THE PARKING LOT FOR PROPER FUNCTIONALITY

• Place base plate in desired anchoring location
• Mark the four base holes with a wax pencil

• Using a 3/4" masonry bit, drill 6" in depth

• Use a rubber mallet or hammer to stuff mungo plugs into the drilled holes

• Make sure the top of each mungo plug is flush with the asphalt surface

• Place the base plate over the four holes and use a socket wrench with a 15/16" drive to thread all four hex lag screws

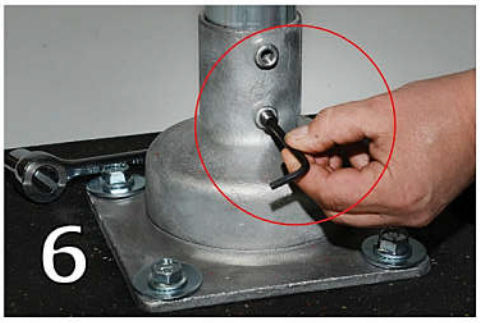

• Insert post over spring, tighten both set screws with a 3/16" allen key (provided)

(866) 825-8659
www.idealshield.com
2525 Clark St.
Detroit, MI 48209