


M30 SHALLOW MOUNT ARRAY

SHALLOW MOUNT BOLLARD - MODEL SMB-400

CRASH TESTED TO ASTM F2656-07 - M30/P1 RATED - STOPS 15,000 LB. VEHICLE AT 30 MPH IMPACT

TYPICAL BOLLARD ARRAY INSTALLATION

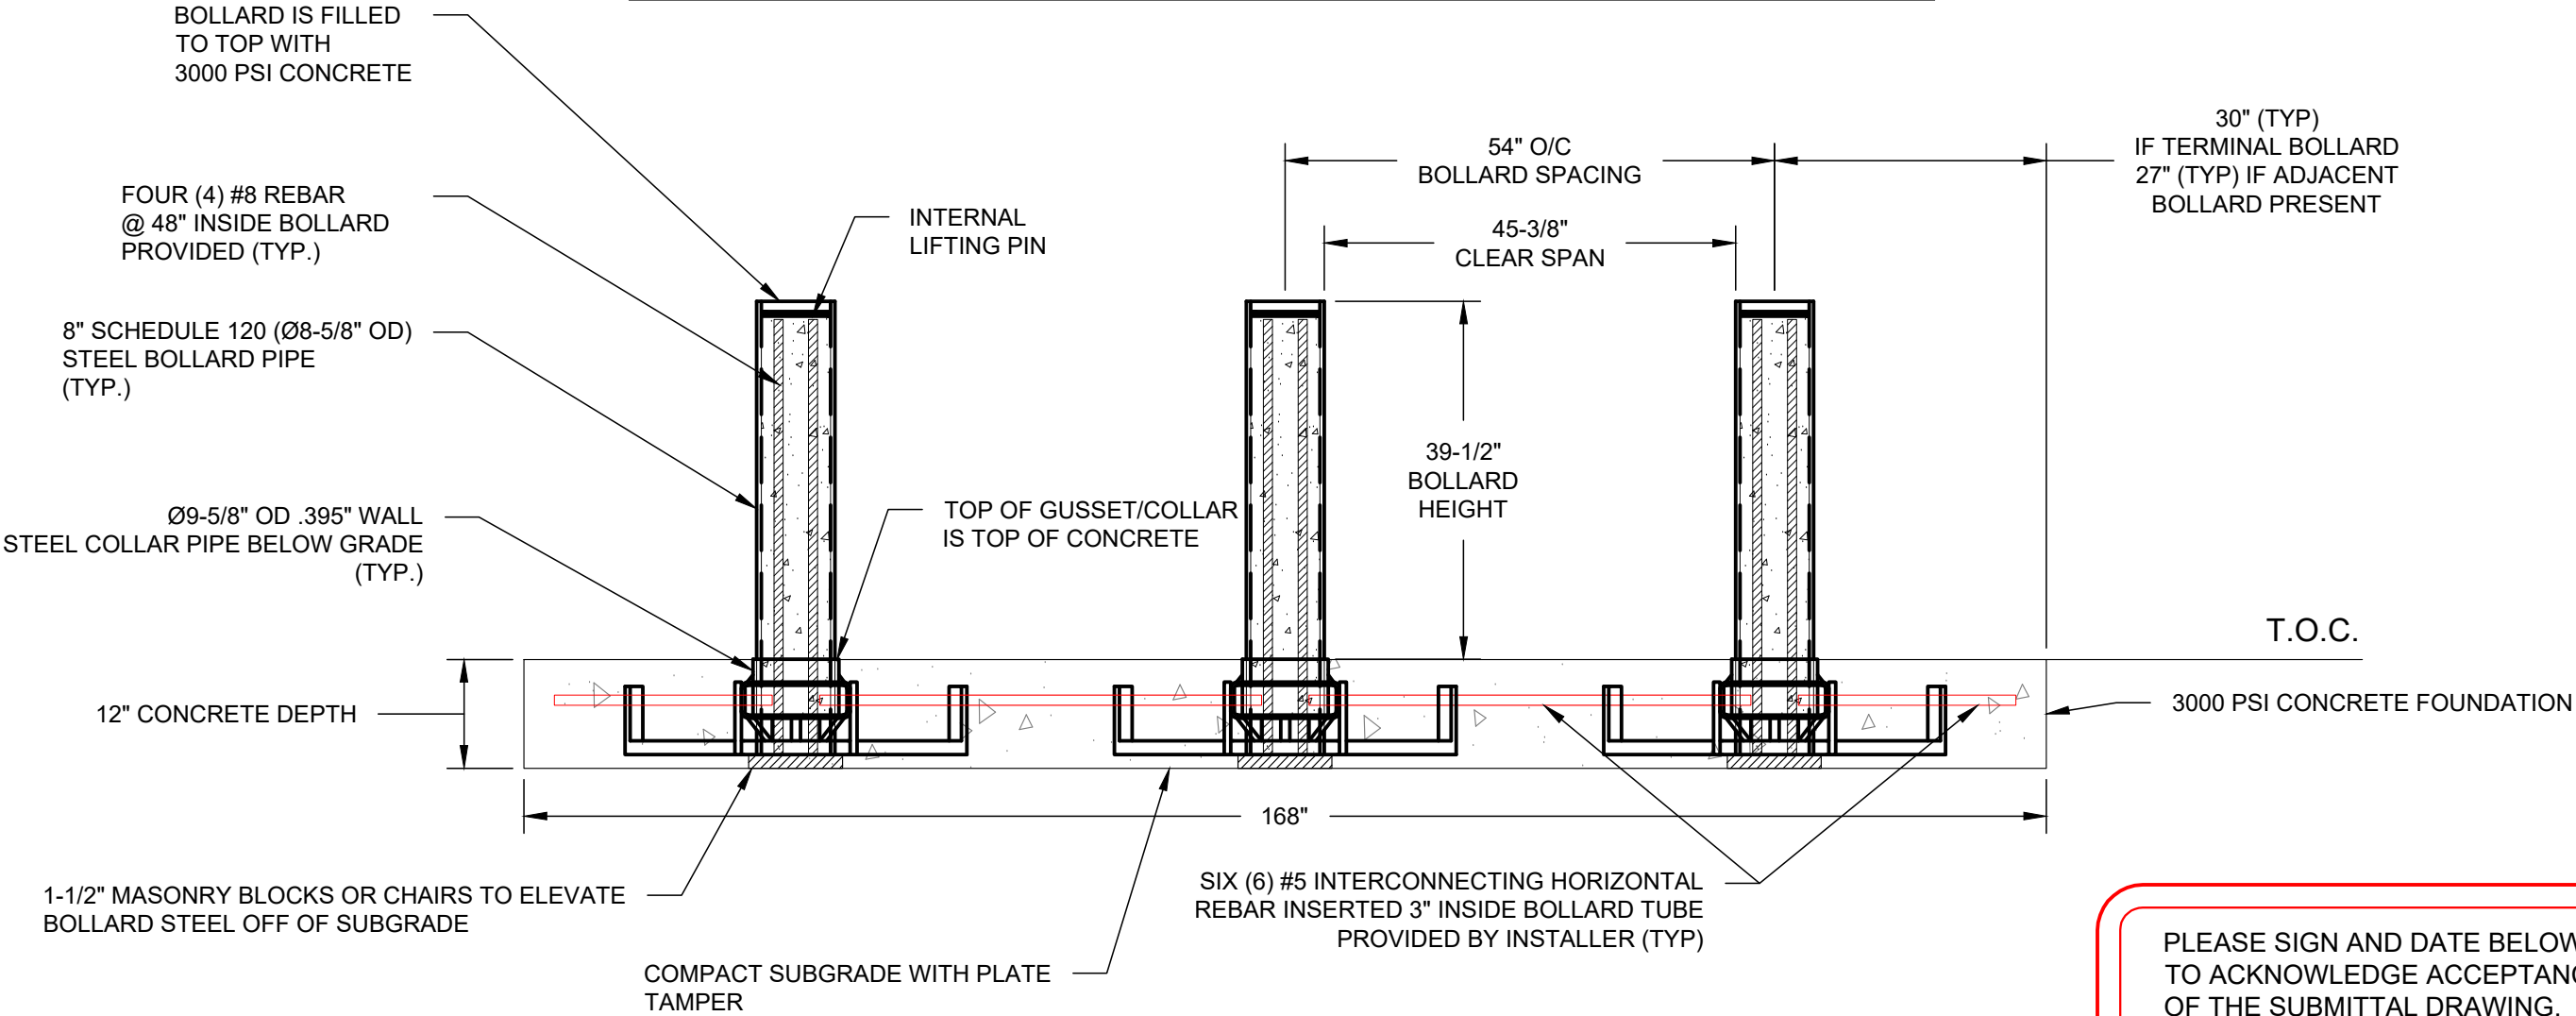

NOTE:
MODIFIED SPACING FOR SITE SPECIFIC CONDITIONS AVAILABLE.

PLEASE SIGN AND DATE BELOW
TO ACKNOWLEDGE ACCEPTANCE
OF THE SUBMITTAL DRAWING.

NAME:
SIGNATURE:
DATE:



IDEAL SHIELD

2525 CLARK ST.
DETROIT, MI. 48209
(866)825-8659 www.idealshield.com
info@idealshield.com

PATENT PROTECTED

ELEVATION VIEW

SMB-400
WEBSITE DRAWING

SHEET: 1 OF 4

20250625-10-M


SCALE: N.T.S.

M30 SHALLOW MOUNT ARRAY

SHALLOW MOUNT BOLLARD - MODEL SMB-400

CRASH TESTED TO ASTM F2656-07 - M30/P1 RATED - STOPS 15,000 LB. VEHICLE AT 30 MPH IMPACT

TYPICAL BOLLARD ARRAY INSTALLATION

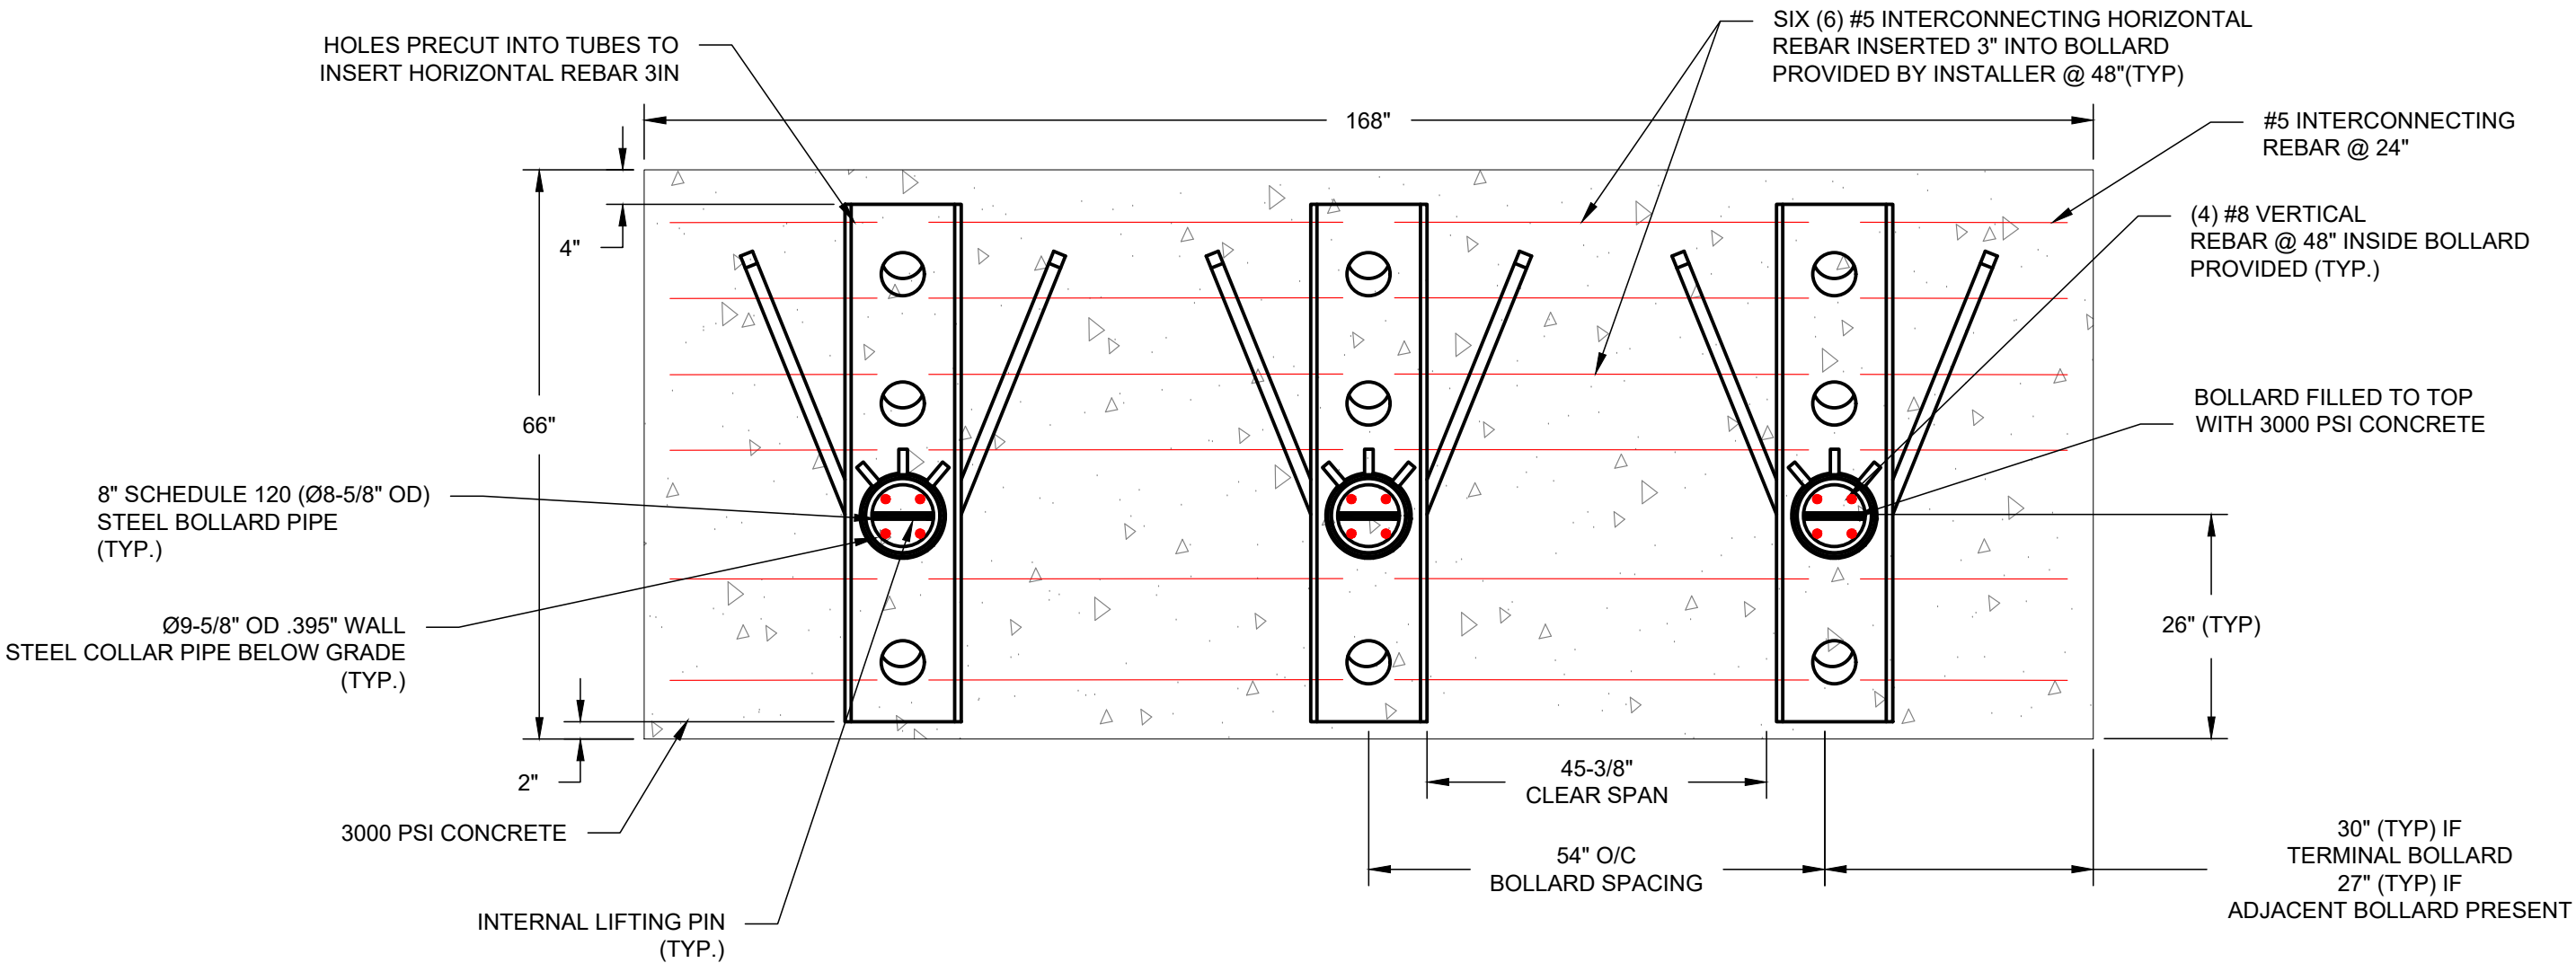

NOTE:
MODIFIED SPACING FOR SITE SPECIFIC CONDITIONS AVAILABLE.



IDEAL SHIELD

2525 CLARK ST.
DETROIT, MI. 48209
(866)825-8659 www.idealshield.com
info@idealshield.com

PATENT PROTECTED

PLAN VIEW

SMB-400
WEBSITE DRAWING

SHEET: 2 OF 4

20250625-10-M

SCALE: N.T.S.

B1 HORNET M30


SHALLOW MOUNT BOLLARD - MODEL SMB-400

CRASH TESTED TO ASTM F2656-07 - M30/P1 RATED - STOPS 15,000 LB. VEHICLE AT 30 MPH IMPACT


MATERIALS PROVIDED

FINISH:
BLACK PAINT

MATERIALS PROVIDED

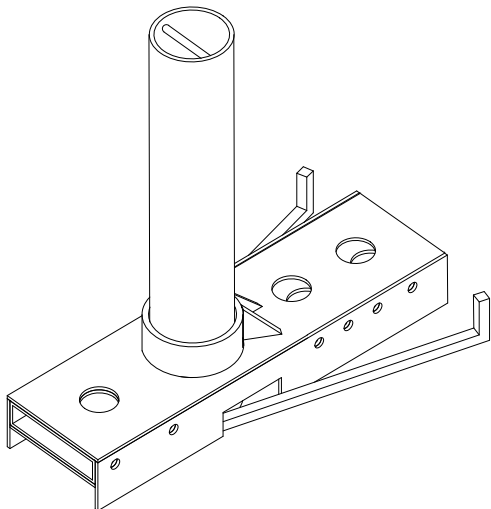

(1) EACH:
PREFABRICATED BOLLARD
WITH BASE STRUCTURE
(PRE-ASSEMBLED)



(4) EACH:
#8 VERTICAL REBAR
@ 48"

MATERIALS PROVIDED BY INSTALLATION CONTRACTOR:

- 1. ABOUT 1.0 CUBIC YARDS OF CONCRETE PER BOLLARD
- 2. SIX (6) #5 HORIZONTAL REBAR PER BOLLARD TO CONNECT ADJACENT BOLLARDS
- 3. MASONRY BRICKS OR CHAIRS TO ELEVATE BOLLARD STEEL OFF SUBGRADE



IDEAL SHIELD
2525 CLARK ST.
DETROIT, MI. 48209
(866)825-8659 www.idealshield.com
info@idealshield.com

PATENT PROTECTED

MATERIALS
PROVIDED

SMB-400
WEBSITE DRAWING

SHEET: 3 OF 4

20250625-10-M

SCALE: N.T.S.

M30 SHALLOW MOUNT ARRAY

SHALLOW MOUNT BOLLARD - MODEL SMB-400

CRASH TESTED TO ASTM F2656-07 - M30/P1 RATED - STOPS 15,000 LB. VEHICLE AT 30 MPH IMPACT

INSTALLATION STEPS

1 EXCAVATE THEN TAMP SUBGRADE WITH PLATE TAMPER.


2 USE MASONRY BLOCK OR CHAIRS TO ELEVATE BOLLARD OFF SUBGRADE, SO THAT TOP OF GUSSET / SLEEVE IS SAME HEIGHT AS TOP OF CONCRETE.

3 PLACE PREFABRICATED BOLLARDS INTO EXCAVATION.

4 INSERT #5 REBAR 3" INSIDE PREFABRICATED HOLES TO CONNECT BOLLARDS.

5 INSERT VERTICAL REBAR INTO BOLLARD TUBE.

6 FILL BOLLARD TUBE AND FOUNDATION WITH CONCRETE.

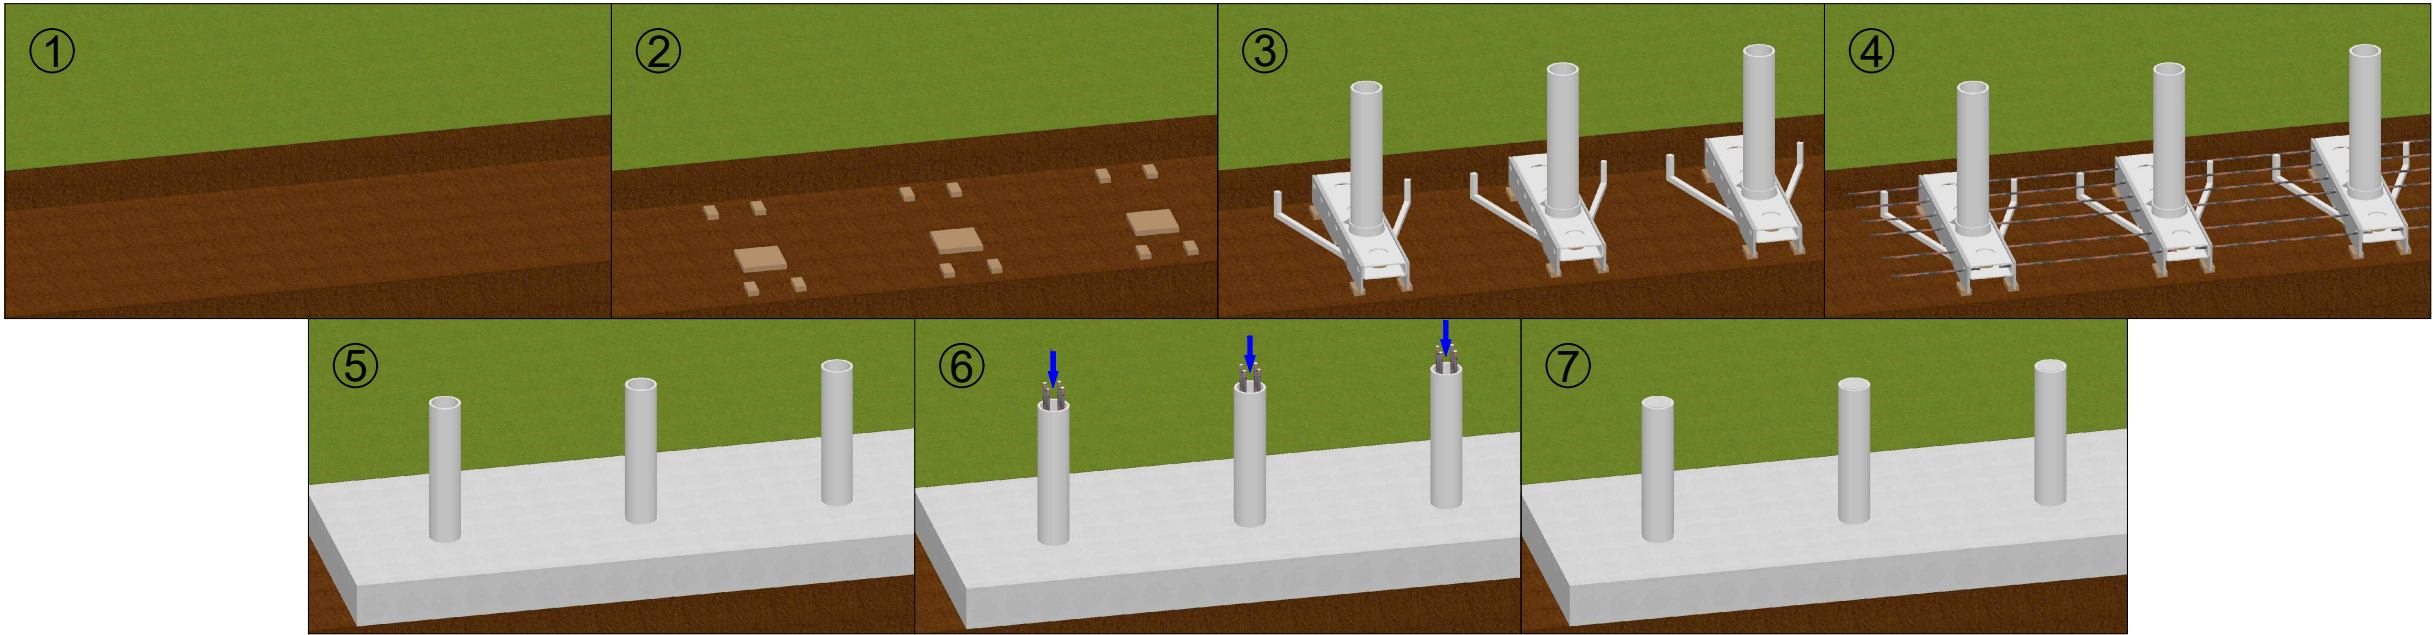

IDEAL SHIELD
2525 CLARK ST.
DETROIT, MI. 48209
(866)825-8659 www.idealshield.com
info@idealshield.com

PATENT PROTECTED

INSTALLATION STEPS

SMB-400
WEBSITE DRAWING

SHEET: 4 OF 4

20250625-10-M

SCALE: N.T.S.